

PrimeTec A PrimeScan A


Please keep for further use!

Combined detector AIR/Radar for opening and protecting automatically controlled sliding doors

Translation of the original instructions

General



PrimeTec A

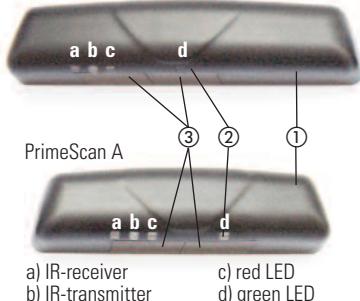

PrimeScan A



a) IR-receiver c) red LED
b) IR-transmitter d) green LED

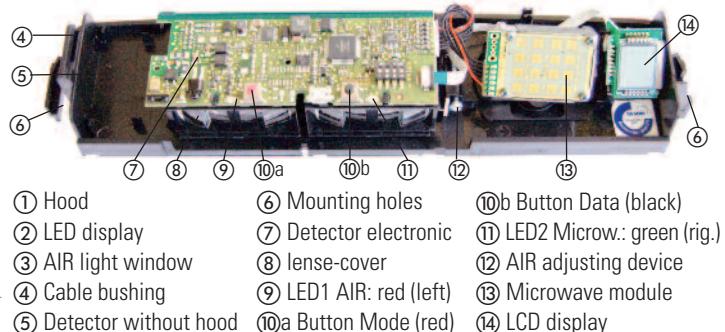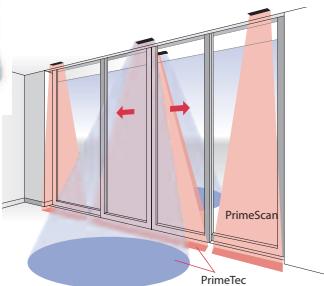

① Hood ⑥ Mounting holes ⑩b Button Data (black)
② LED display ⑦ Detector electronic ⑪ LED2 Microw.: green (rig.)
③ AIR light window ⑧ lense-cover ⑫ AIR adjusting device
④ Cable bushing ⑨ LED1 AIR: red (left) ⑬ Microwave module
⑤ Detector without hood ⑩a Button Mode (red) ⑭ LCD display

1 Safety instructions

Observe the national and international regulations on door safety.

Only trained, qualified personnel may mount and start up the detector.

The unit may only be opened and repaired by Bircher Reglomat.



The unit may only be operated from a safety extra-low voltage (SELV) system with safe electrical separation.

Always consider the safety functions of your application as a whole, never just in relation to one individual section of the system.

The installer is responsible for carrying out a risk assessment and installing the detector and the door system correctly.

Avoid touching any electronic components.

The door drive and transom profile must be earthed correctly.



Start-up

Recommended start-up sequence: I. Mounting II. Connection III. Initialisation

2 Mounting

I Mounting

1. Remove cover hood
2. Set AIR field width (see chapter 2.1)
3. Lay and connect cable
4. Mount detector


2.1 Setting the AIR field width (PrimeTec / PrimeScan)

The width of the AIR field can be set using the click-in plastic cover in front of the detector's lens.

* Field width:
2.3 x 0.2 m
at 2.2 m

Detector without cover:
All light beams are active

Possible field width settings (Dimensions at 2.2 m mounting height):

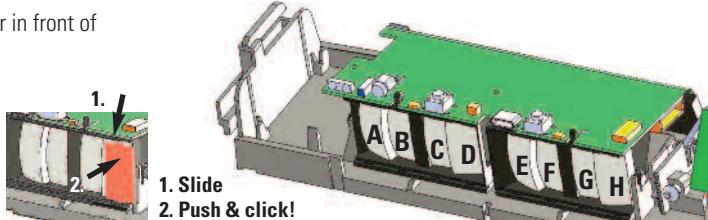


A, B, G, H covered	E, G, H covered	G, H covered	A, B, G, H covered
Field width: 0.25 x 0.2 m	Field width: 0.75 x 0.2 m	Field width: 1.2 x 0.2 m	Field width: 0.25 x 0.2 m

A, D covered	A, B, D covered	A, B covered	A, B, G, H covered
Field width: 1.3 x 0.2 m	Field width: 0.75 x 0.2 m	Field width: 1.2 x 0.2 m	Field width: 0.25 x 0.2 m


2.2 Mounting of the detector

1. Position drill template
2. Drill the holes, remove drill template
3. Lay cable and mount detector

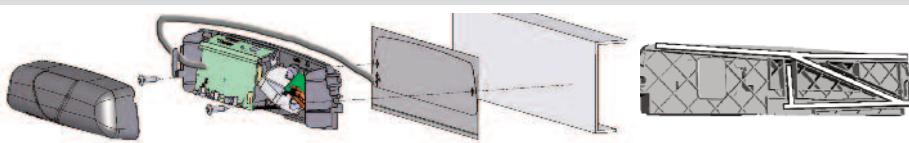

*Factory setting

3 Electrical connections

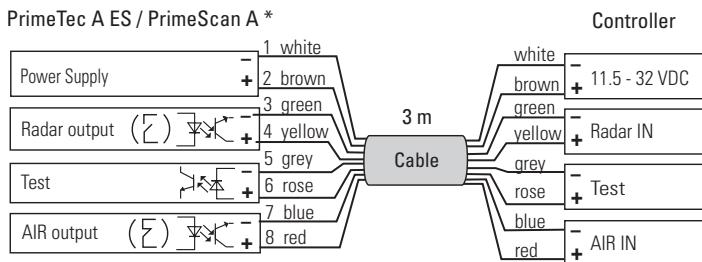

* For other versions (eg. PrimeTec A ES.SM.V) see supplementary sheet

Initialisation


Remove the current supply all objects that do not form part of the usual door system environment from the door area BEFORE switching on.

Make sure that no-one is in the door area, otherwise correct startup will not be possible.

The alternate flashing shows the initialisation (teaching) of the detector (Duration 20 - 25 seconds). During startup, the firmware version FXXX is displayed.

Once the detector has been connected to the power supply, it can be configured via the Reglobeam within the next 30 minutes. Following initialisation, the red/green LED only lights up when a detection has occurred. **The door system has been taken into operation at this point.**

If any further settings or calibrations are required, proceed as described in the following sections.


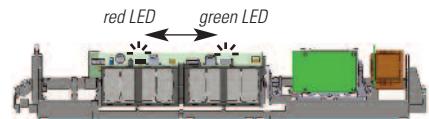


Mechanical fine tuning

5.1 AIR-field (PrimeTec / PrimeScan)

Settings of the inclination angle on the adjustment screw:



Inclination: $-5^\circ \dots +7^\circ$ continuously adjustable

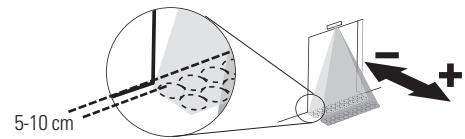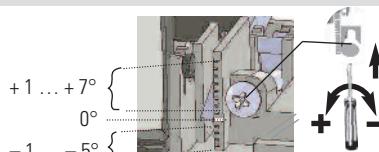

5.2 Radar field (PrimeTec)


Manual settings of the inclination

$0^\circ \dots +90^\circ$ in 5° steps

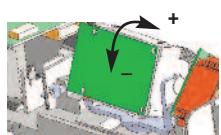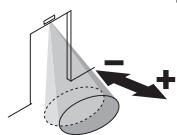


Round radar field

→ see table parameter 3

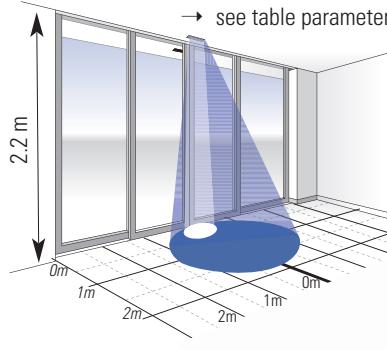



Wide radar field

→ see table parameter 3

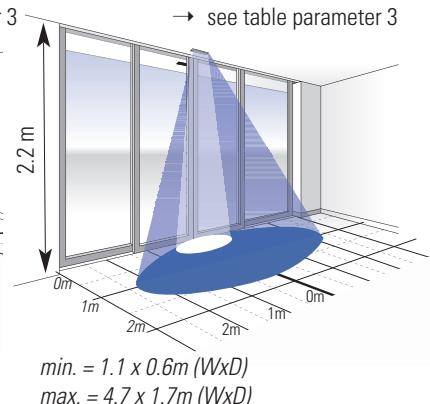

Manual settings of the pivoting

$-20^\circ \dots +20^\circ$ in 5° steps

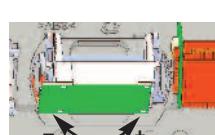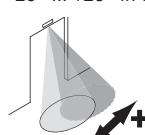

6 Configuration with Reglobeam remote control (refer to Reglobeam 2 operating instructions)

Remote control:	Basic functions of the remote control:						
	Function	Start key	Function key(s)	Number key(s)	Display on remote control	Function of the remote control	Notes
	Establishing the connection	(G)	none	none	(G) Continuously lit (G) flashes	Connection to the detector No connection to the detector	If (G) flashes, hold the remote control closer to the detector and point it more directly at the detector, also check the batteries.
	Establishing the connection with address selection	(G)	none	(1) – (8) It is not possible to access (8) by Reglobeam.	(G) and the number of the selected number key	Address = Number of the selected number key	If (G) flashes, no connection, If (G) and all numbers light up, no configuration mode is activated.

7 Configuration by hand (Operator buttons)

	Automatic	Config. mode	Choose	Choose	Funct./Parameter	Back to choice	Back to autom.
 LCD	 A: Automatic mode t: test active ① Radar output on ② AIR output on	 Press both buttons simultaneously	 General	 Red button: Changes between Radar, AIR and general functions	 Black button: choose	 Red button: Choose parameter * Black button: Choose value of the parameter	 Press both buttons

*) Value is going to be saved by switching to other parameters

Radar functions (PrimeTec)

	①	OPERATION OF THE BUTTONS ¹			REGLOBEAM (REMOTE CONTROL) ²		
	Parameter/Mode	Value/Date	LCD	Mode	Significance of number keys		
Field width		1 1 - 5	└ ① └ ③	⑤	① = Smallest radar field, ② , ③* = Medium radar field , ④ , ⑤ = Largest radar field size		
Direction recognition		2 1 - 3	└ ① └ ②	⑥ + ⑧	① = both directions, ②* = Forwards ③ = Backwards		
Field geometry		3 1 - 2	└ ① └ ③	⑥ + ⑨	① = round radar field ②* = Wide Radarfield		
Cross Traffic Optimisation		4 1 - 5	└ ① └ ④	⑥ + ⑤	① = Off, ②* - Low, ③ ... ④ = High (① - ⑤ = Sens. values for cross traffic masking) (Expedient only at round field)		
SMD field width (Slow Motion Detection)		5 1 - 5	└ ① └ ⑤	⑥ + ③	①* = Off, ② = Low, ③ ... ④ = middle, ⑤ = High (① - ⑤ = SMD field)		
Door filter		6 1 - 4	└ ① └ ⑥	⑥ + ⑥	① * = Filter off, ② = Door filter on (Movements of the door), ③ = Interference filter on (EMV flows, e.g. fluorescence tube), ④ Door and interference filter on		
Radar exit		7 1 - 3	└ ① └ ⑦	⑥ + ②	①* = active, ② = passive, ③ = Radar off (not possible with SM-version)		

AIR functions (PrimeTec / PrimeScan)

	②	OPERATION OF THE BUTTONS ¹			REGLOBEAM (REMOTE CONTROL) ²		
	Parameter/Mode	Value/Date	LCD	Mode	Significance of number keys		
Set sensitivity		1 1 - 4	└ ② └ ③	⑥ + ①	① - high sensitivity (acc. to DIN 18650 ≤ 3.5m) ② - medium sensitivity (acc. to DIN 18650 ≤ 3.2m) ③* - normal sensitivity (acc. to DIN 18650 ≤ 2.6m) ④ - very low sensitivity		
Set teach-in time		2 1 - 5	└ ② └ ③	⑥ + ⑥	① = 10 s, ② = 30 s, ③* = 60 s, ④ = 180 s, ⑤ = 15 min		
AIR exit contact logic		3 1 - 4	└ ② └ ③	⑥ + ②	① = active ②* = passive, = No detection contact open	③ I = slave high ④ I = slave low	Settings for series circuit; See application sheet
AIR exit		4 1 - 2	└ ② └ ④	⑥ + ①	①* = on, ② = off (AIR is going to be reactivated automatically after 15 minutes)		
Manual background teaching		-	-	⑥ + ③	Teaching background (Background is taught when red LED extinguished). Duration approx. 5 sec.		

* Factory sett.

¹Press both buttons shortly for configuration mode // ² Press start key ⑥ before switching on the configuration mode. / The green LED lights up quickly when receiving data

General functions (PrimeTec / PrimeScan) ①②

	Parameter/Mode	Value/Date	LCD	Mode	Significance of number keys
Reset		—	—	⑨	Initialisation
Connection	● - - - - ●	—	—	⑥ + ①	③ = Switch off configuration mode by Reglobeam. Switching on by access code or power cut.
Comfort settings (After a comfort setting and leaving the configuration mode a reset will be enforced)		1 1 second for change the comfort setting	└ ①② └ ①	⑥ + ②	①* = Standard, ② = foot path, ③ = home for the aged, ④ = wind screen, ⑤ = high door, ⑥ = narrow door, ⑦ = wide door, ⑧ = factory settings
Activate / not activate combined exits		2 1 - 2	└ ①② └ ②	⑥ + ⑨	① = activated (AIR or radar actuate both the radar exit) ②* = not activated
RegloBeam 2 address (communication remote control ➔ detector)		3 1 - 6	└ ①② └ ③	⑥ + ⑧	①* = Address 1, ② = Address 2, ③ = Address 3, ④ = Address 4, ⑤ = Address 5, ⑥ = Address 6 In the case of overlapping AIR fields consider the addressing order: → odd number ① → evennumber ② → add number ③
Access code (By pressing both operating buttons simultaneously it can be switched to the configuration mode of the general functions)		—	—	Status	Save
On	⑥ + ⑨	⑥ + ⑨	⑥ + ⑨	Choose code (1111 - 9998)	Press ⑥
Off	⑥ + ⑨	⑥ + ⑨	⑥ + ⑨	Press ⑥ X	Press ⑥

8 Remedying malfunctions

8.1 Remedying false tripping

red LED	green LED	Fault	Remedy
dark	continuously lit	Radar tripping when door is closing	1. Set angle of radar further away from the door. 2. Adjust radar field size.
		Radar false tripping without apparent external influence	1. Avoid light sources (e.g. fluorescent tubes) in the immediate vicinity of the detector. 2. No moving objects (e.g. plants, advertising posters, etc.) in the vicinity of the detector. 3. Avoid strong vibration at the radar detector 4. Possible influence from a second radar detector in the vicinity (very unlikely)
continuously or recurrent lit	dark	AIR tripping when door is closing	1. Set angle of AIR detector further away from the door 1. Avoid light sources (e.g. fluorescent tubes) in the immediate vicinity of the detector.
		AIR false tripping without apparent external influence	2. Avoid puddles of water on the ground. 3. Avoid strong vibration at the AIR detector. 4. Influence of overlapping AIR field from another detector. Set new Reglobeam address or CAN bus address. 5. Reduce sensitivity of the AIR (increase the value).
dark	dark	Door stays open	1. Switch AIR exit contact logic to other value

8.2 Remedying detector malfunctions

red LED	green LED	LCD	Fault	Remedy
flashing	dark	E ^① 00 1/2	1: Self test (RAM/ROM) 2: Watchdog	1. Disconnect device from supply voltage 2. Clean lens 3. Restart device 4. If device displays fault again or does not start → renew device
dark	flashing	E ^① 003/4	3: Radar fault 4: Radar exit fault (SM)	1. Disconnect device from supply voltage 2. Check plug on microwave module 3. Restart device 4. If device displays fault again or does not start → renew device
flashing	dark	E ^② 005/6	5: AIR fault 6: AIR exit fault	1. Disconnect device from supply voltage 2. Clean optics-cover and check for scratches 3. Restart device 4. If device displays fault again or does not start → renew device

9 Technical data

PrimeTec / PrimeScan	
Technology	Active infrared (wavelength: 880nm), radar double field module → PrimeTec (24.125 GHz)
Number of IR spots	36
IR spot dimensions	3 cm x 3 cm (at 2.2 m mounting height)
Response time	< 200 ms
Mounting height	1.8 – 4 m
Angle setting of IR spots	5° - 7° continuously adjustable
Electrical power supply	≤ 120 mA @ 11.5 – 32 VDC
Power consumption	< 4 watts
Making current	≤ 240 mA
Exit (AIR / Radar)	Optocoupler (50 VDC, 20 mA)
Protection type	Suitable for use acc. to IP54
Remote control range	3 m
Operating temperature	- 20° to 60° C
Dimensions	PrimeTec: 260 x 60 x 48.5mm (LxWxD), PrimeScan: 216 x 60 x 47.5mm (LxWxD)
Weight	PrimeTec: 250 g, PrimeScan: 180 g
Life cycle	20 years

10 Declaration of conformity, identification of the year of manufacture by means of the serial number

10.1 Declaration of conformity

Manufacturer: Bircher Reglomat AG, Wiesengasse 20, CH-8222 Beringen

Following directives have been observed: MD 2006/42/EG, RoHS 2011/65/EU, RED 2014/53/EU, EMC 2014/30/EU

Following standards have been taken into acc.: DIN 18650-1:2010, EN 16005:2012, BS 7036-0:2014, EN ISO 13849-1:2015, EN 12978:2003+A1:2009

EC type-examination certificate: 44/205/12/403013-001

Notified inspection centre: TÜV NORD CERT, NB 0044

Product variant: PrimeTec A ES, PrimeTec A ES/02, PrimeScan A, PrimeScan A C/01

10.2 Identification of the year of manufacture



11 Contact

Manufacturer:

Bircher Reglomat AG

Wiesengasse 20

CH-8222 Beringen

www.bircher-reglomat.com

Danish seller:

Swissdoor ApS

Stenhuggervej 2

DK-5471 Søndersø

mail@swissdoor.dk

www.swissdoor.dk